Exhibit 11

Sacramento, California

Fax: (360) 251-8193 Email: support@battensplus.com

Web site: http://www.BattensPlus.com

This installation guide must be strictly followed

Figure 1


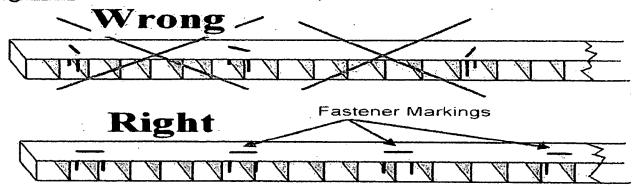


Figure 2 - Fastening Guide BattenUP Polypropylene Batten



Each batten has nail markings. Each mark runs vertical to the batten; the same direction as the flutes.

Figure 1 shows the proper placement of fasteners. The nail markings are placed on the batten according to the "Fastening Guide" Figure 2.

Important:

If you are double felting or installing on a pitch of 7in12 or greater, 1½-inch-long or longer staples should be used. Air pressure should be adjusted so staple is flush with the surface of the batten.

BattenUP battens must be fastened with 1 %-inch-long minimum, 1-inch-crown staples OR 1%-inch-long minimum, $\frac{7}{16}$ -inch-crown staples.

Staples Must Be Placed Horizontally On The Batten.

Battens are to be fastened at 6-inches on center with the outside fasteners placed 1-inch from the outside edge of the batten. From left to right staples will be placed as follows:

1", 6", 12", 18", 24", 30", 36", 42", 47"

BattenUP Battens not recommended for roof pitches over 12in12.

Safety: Plastic and wood dust and construction debris should be blown off roof deck for safety purposes.

EXHIBIT

BP - 0012